LOWRY

Steam Mop

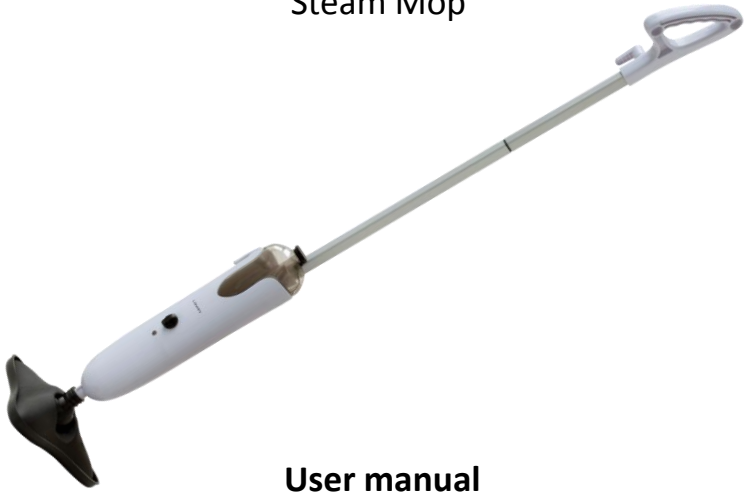

User manual

Model number: LSM4001

Please read these instructions carefully and keep them for future reference

Contents

	Page
Unpacking your Steam Mop.....	2
Safety instructions.....	3
Feature diagram.....	6
Steam Mop assembly.....	7
Using your Steam Mop	8
Cleaning and care.....	10
Problem solving.....	11
Connection to the mains supply.....	12
Guarantee.....	13

Unpacking your Steam Mop

Before you use your Steam Mop

1. Remove all the packaging .

2. Check the Steam Mop after unpacking for any visual damage such as:

- Misaligned or damaged Main Body and water tank
- Damage to the Handle assembly
- Damage to the Head assembly
- Damage to the plug or cable
- If you can see any damage **do not use the Steam Mop**

Do not use for any purpose other than described in this user's manual. Improper use will void warranty.
Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped or damaged in any manner. The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped.

Safety instructions

When using electrical appliances, basic safety precautions should always be observed, including the following:

- Read all instructions.
- To protect against electrical shock do not immerse cord, plug, or appliance in water or other liquid.
- Unplug from the mains outlet when not in use, before putting on and taking off parts, and before cleaning.
- The use of accessory attachments not recommended by the appliance manufacturer may cause fire, electric shock or injury. Only use the accessories supplied by the manufacturer.
- Do not let the cord hang over the edge of the worktop, or touch hot surfaces.
- Never remove parts from the appliance such as the screws and so on.

Warning: it is hazardous for anyone other than a competent person to carry out any service or repair operation which involves the removal of a cover which gives protection against exposure to electrical parts.

This unit operates with hot water vapour (steam), to avoid scolding and burns take extra care when in use .

Safety instructions

Do not operate this appliance for anything other than its intended use. **This product is intended for household use only.** Do not use outdoors.

Warning: children should not use this appliance. Close supervision is necessary when any appliances are used near children.

Warning: this appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to make sure that they do not play with the appliance.

- Do not direct steam at people, animals, electrical outlets, or equipment containing electrical components .
- Unplug from outlet when not in use .Do not leave steam mop unattended while plugged in.
- Do not use with damaged cord or plug.
- Do not use steam mop if it has been dropped, damaged, left outdoors or dropped into water.
- Keep the steam mop away from water; do not allow it to get wet. If unit is wet, do not plug unit into wall socket or turn unit on.
- Do not handle steam mop with wet hands.
- Do not pull or carry by cord, use cord as a handle, close door on cord, pull cord around sharp corners or edges, or expose cord to heated surfaces.
- Do not unplug by pulling on cord.

Safety instructions

- Do not use appliance in an enclosed space filled with vapor given off by oil-based paint, paint thinner, some moth proofing substances, flammable dust, or other explosive or toxic vapors.
- Do not use on leather, wax polished furniture or floors, synthetic fabrics, velvet or other delicate, steam-sensitive materials.
- Do not immerse unit in water or other liquids.
- Never put descaling, aromatic, alcoholic or detergent-based products into the steam mop, as this may damage the unit.
- Close attention is necessary when used near children.
- Do not store with a wet mop pad still attached.
- Using distilled or demineralized water will maximize the performance of your steam mop.
- Use extra care when cleaning on stairs.
- Do not use steam for space heating purposes; household use only.
- Use on waxed or some unwaxed floors may diminish glossiness. Do not use on unsealed wood floors. Test in an inconspicuous area or check the care instructions from your flooring manufacturer.

Feature diagram

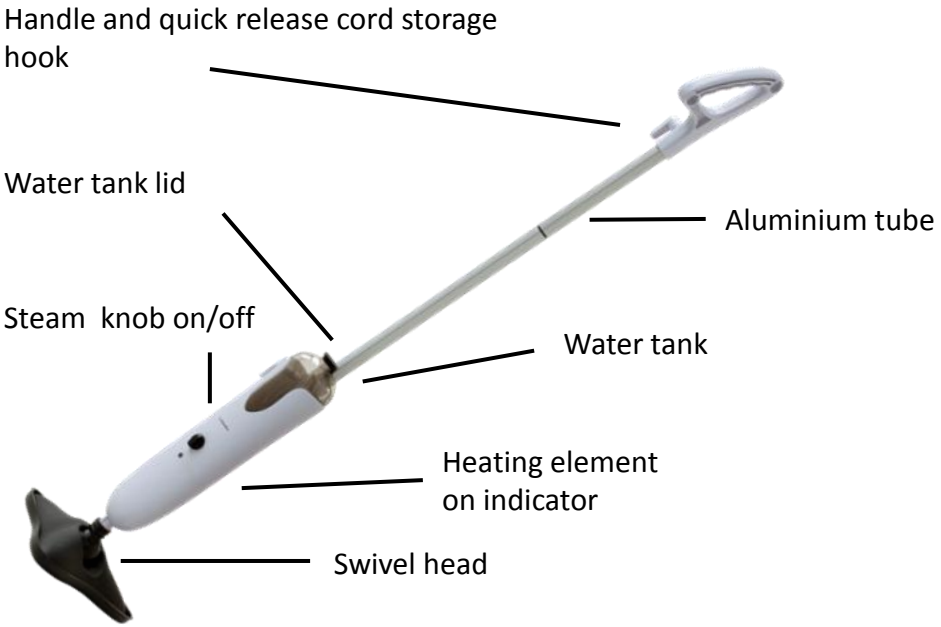

Carpet Glider

Cloth Pads

Steam Mop Assembly

There is a plastic rib located near the nozzle on the main body, align this with the groove on the plastic swivel head. Push the main body and nozzle in to the swivel head. There is a little hole in the swivel head, make sure the little plastic square on the main body pops through this hole.

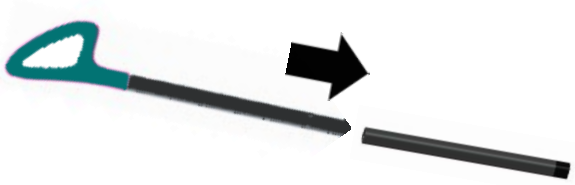

Insert the Handle and the aluminium tube assembly in to the single aluminium tube. Ensure it is fully pushed in, so there is only a thin section of black plastic visible.

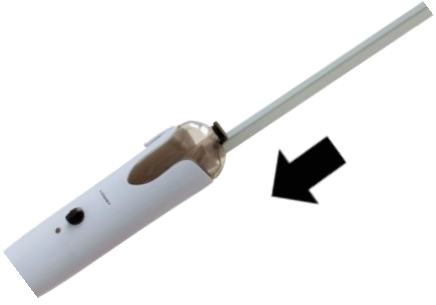

Insert the aluminium tube into the slot on the main body and water tank. Ensure it is fully pushed in, so the black clip is visible in the main body.

Using your Steam Mop

- Fully vacuum or sweep the floors prior to using the steam mop.
- Install the mop pad onto the swivel head for solid floors, and add the plastic carpet glider for carpets.

Solid floors

Carpet glider

- Use the water cup to fill the tank, taking care not to over fill the tank.

CAUTION: Before filling the tank, make sure that the steam knob is in the 'off' position.

- Release the cord by twisting the quick release cord storage hook, and plug into a 13A outlet.
- When the mop is plugged in, the indicator light will illuminate. After 30 seconds, the mop is ready to use.
- Open the steam knob to the 'open' position.
- When using the steam mop, do not keep it over a particular area for more than 30seconds. If it is not moved there is a possibility damage could be caused.

Using your Steam Mop Cont'd

- When the steam mop stops emitting steam, simply fill up the tank using the water cup.
- If you have a break or rest from the steaming, let the steam mop stand vertically, and switch the steam knob to the 'close' position.
- After use, twist the steam knob to 'close' to shut off the steam.
- Unplug the power cord from the outlet.
- Allow the Mop Pad to cool and then carefully remove the Mop Pad from the swivel head.
- Empty any remaining water from the water tank before storing.
- Machine wash the soiled Mop Pad if necessary.
- Wrap the power cord around the upper and lower cord hooks.
- Wipe all surfaces of the steam mop with a soft cloth
- Store upright in a protected, dry area or hang by the handle.

CAUTION: Do not install or remove the mop pad while steam is emitting.

To order more replacement mop pads, please contact the customer service No.

This unit operates with hot water vapour (steam), to avoid scolding and burns take extra care when in use .

Cleaning and care

WARNING: Electrical Shock Hazard.

Before you clean the appliance, disconnect the mains plug from the wall socket.

- Do not immerse the cord, plug or appliance in any liquid.
- The mop heads can be cleaned in the washing machine. Wash them separately.
- The main body and cord may be cleaned with a damp cloth. DO NOT use any abrasive cleanser or material to clean any part of the steam mop as it may damage the finish.
- Never immerse the Steamer main body, components, power cord or plug into water for cleaning.

Problem Solving

Problem: Reduced steam/no steam is coming out

Try the following:

- Make sure the water tank is filled
- Verify the unit is plugged into an approved electrical outlet and that the fuse or breaker is functioning properly.
- Check that the steam adjustment knob is set to “open”.

Problem: Indicator light is not working

Try the following:

- Verify the unit is plugged into an approved electrical outlet and that the fuse or breaker is functioning properly.
- Verify the plug is securely inserted into the outlet.

Problem: There is a peculiar smell coming from the unit

Try the following:

- If this is the first time you are using the mop, continue using the product. The smell may be due to new parts being heated up for the first time.
- Discontinue use if problem persists and contact Customer Service.

Connection to the mains supply

WARNING- THIS APPLIANCE MUST BE EARTHED
This appliance is designed to operate from a mains supply of AC 230V ~50Hz.
Check that the voltage marked on the product corresponds with your supply voltage.
This product is fitted with a 13A plug complying with BS1363 and is fitted with an appropriate fuse complying with BS1362. Always replace the fuse with one of the same rating. If the plug is unsuitable for your mains socket or needs to be replaced, please note the following:
Important: The wires in the mains lead must be connected as per the following diagram -

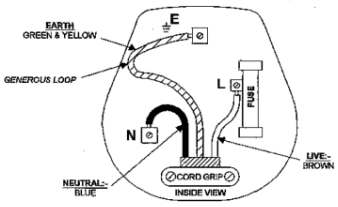

Always ensure that the plug cord grip is fastened correctly.

If your appliance is supplied with a non-rewireable plug, you will find that it incorporates a fuse, the value of which is indicated either on the base of the plug or on the fuse carrier. Always replace the fuse with one of the same rating. If you need to remove the plug, cut it from the mains lead and dispose of it. Never attempt to re-use this plug or insert it into a socket outlet, as there is a very great risk of an electric shock.

Rated voltage: AC 230V~50Hz
Power consumption: 900W

Guarantee

This product is guaranteed for 12 months from the date of the original purchase. If any defect arises due to faulty materials or workmanship the faulty product must be returned to the place of purchase.

Refund or replacement is at the discretion of the store.

The following conditions apply:

- The product must be returned to the retailer with the original proof of purchase.
- The product must be installed and used in accordance with the instructions contained in this instruction guide and any other instructions for use which has been supplied.
- It must be used for domestic purposes only and for its intended use.
- This guarantee does not cover wear and tear, damage, misuse or consumable parts.

This does not affect your statutory rights.

For Customer Services & Spare parts please call 0845 209 7461
Opening times: Monday - Friday 9am until 5pm

Revision 2

CE

This symbol is known as the 'Crossed-out wheelie bin Symbol'. When this symbol is marked on a product/batteries, it means that the product/batteries should not be disposed of with your general household waste. Only discard electrical/electronic/battery items in separate collection schemes, which cater for the recovery and recycling of materials contained within. Your co-operation is vital to make sure the success of these schemes and for the protection of the environment. For your nearest disposal facility, visit www.recycle-more.co.uk or ask in store for details.

We reserve the right due to possible changes to design to alter the instruction manual without prior notice.